

PG Mobility Scooter Status Code

1 - 2		Throttle Trip
1 - 3		Speed Limit Pot. Trip
1 - 5		High Battery Voltage
2 - 2		Possible Controller Trip
3 - 2		Solenoid Brake Trip
3 - 3		Possible Controller Trip
3 - 5		Throttle Trip or Inhibit 2 Active
4 - 1		Possible Controller Trip
4 - 2		Motor Disconnected/Wiring Trip or Freewheel Overspeed
4 - 3		Possible Controller Trip
4 - 4		Possible Controller Trip

4 Alternative single flash repeated code sequence. See following diagram

2		Low Battery Voltage
3		High Battery Voltage
5		Solenoid Brake Trip
6		Throttle Trip
7		Throttle Trip
8		Motor Disconnected
9		Possible Controller Trip